

Acoustic Panel Impaling Clips

MetroFlex Acoustic Panel Impaling Clips are designed to make fastening Acoustic Panels to walls fast and easy. MetroFlex Impaling Clips are made of galvanized steel and contain 8 impaler spikes per clip. The impaling clips are designed to work with both Fiberglass and Mineral Fiber Panels with densities from 3# up to 8# (per cubic foot).

INSTALLATION:

A minimum of 4 MetroFlex Impaling Clips must be used per Acoustic Panel. A basic 24" x 48" panel will require 4 to 6 clips.



MetroFlex Acoustic Panel Impaling Clip

DISTRIBUTED ONLINE BY:WWW.BuyInsulationProducts.com


*Hold the Acoustic Panel up on the wall where it is to be installed and lightly mark the placement of the panel with pencil.

*Measure approximately 4 inches inside from each edge of the panel to determine the location of the corner clips.

*The Impaling Clips have a hole in the center for a standard screw if the clip falls on a stud, or with a drywall expansion screw if it does not fall on a stud (screws not included).

*Once all clips are installed, hold the panel over the clips and with the use of a level, firmly press and impale the Acoustic Panel onto the clips. *Warning: On lighter density panels and 1" thick panels, be careful of the impaling spikes.

*For a permanent placement of the Acoustic Panel, beads of construction grade adhesive caulking can be applied to the wall before impaling the panel onto the clips.

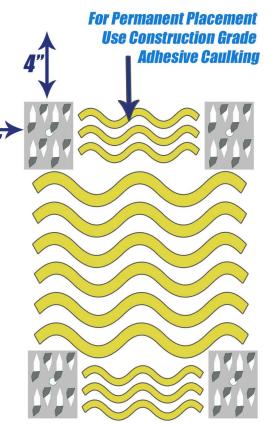



TO ORDER CALL 973-826-8134 www.BuyInsulationProducts.com